

Track Dynamics OBD2 (Plug n Play) Telematics Device **INSTALLATION GUIDE**




Step 1

Locate the vehicle's OBD2 port, this is typically located underneath the dash on the driver's side, above the accelerator pedal. If you can't locate the OBD port, refer to the vehicle manual.

Step 2

Release the OBD2 plug from the mounting bracket on the vehicle. This is usually achieved by pressing in one or both of the clips either side of the plug, and pushing the plug backward into the mounting hole. A flat blade screwdriver is helpful for this task. Some vehicles have a screw-mounted plug; there is an included clip on the Y-cable for this purpose.

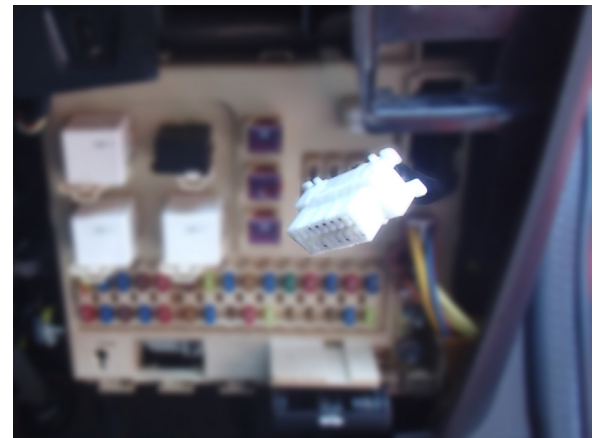

Step 3


Prepare your Y cable. If not already attached, plug the Track Dynamics OBD device to one end of the Y splitter.

The Y-splitter cable comes supplied with an optional mounting bracket for screw-mounted OBD2 plugs. This bracket will need to be removed in order for the plug to fit into the mounting bracket in the vehicle. If the vehicle has a screw mounted plug, you will need to leave this mounting bracket attached.



Step 4

Take the Y-cable and plug it into the recently liberated OBD2 socket. The OBD2 socket will provide the GPS device with power and ground, avoiding any splicing of wiring.

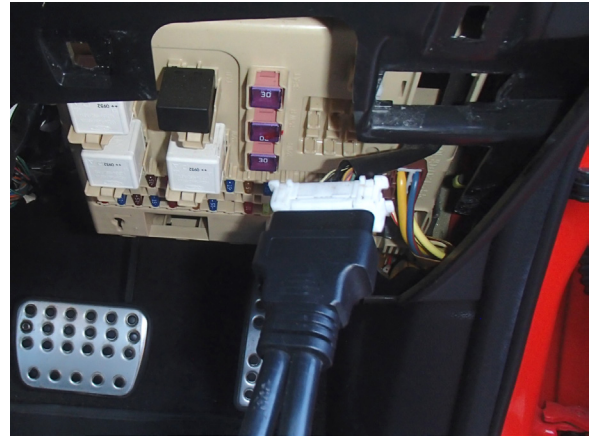

Step 5

Using the remaining un-connected leg of the Y-cable, replace the socket into the dash mount; hereby replicating a factory installation look.



Step 6

Once the remaining open end of the Y cable is plugged into the factory OBD socket, tuck it, along with the Track Dynamics OBD device, behind the dashboard. It may be necessary to remove some factory panelling or trims to gain access. Using Zip-ties if necessary, securely fasten the device and cable out of sight – taking care to avoid any mechanical components that it may interfere with.

Once completed and any panelling that was removed is replaced, you should have a factory looking OBD2 plug and a 100% concealed GPS device inside the vehicle.



FINISHING NOTES

- Please ensure the device has powered up prior to finalising installation, this will be evident by a Green LED light, and a flashing Blue light. It may take a few minutes for the blue LED to begin flashing.
- It is important to ensure the device is well secured to prevent it falling down and interfering with the operation of the vehicle. Please ensure this step is closely followed.
- If desired, once installation is completed please affix the tracking alert sticker in a prominent position, we suggest top right windscreen, next to servicing sticker.
- If any problems are encountered, please contact Fleetdynamics on 1300 087 225.